

## DIAGNOSTIC TROUBLE CODE CHART

### AIRBAG SYSTEM

DTC Code	Detection Item	Trouble Area	Check Mode	SRS Warning Light	See page
B0100/13	Short in Driver Side Squib Circuit	1. Steering pad (Driver side squib) 2. Spiral cable 3. Center airbag sensor assembly 4. Instrument panel wire	*2	ON	<a href="#">RS-46</a>
B0101/14	Open in Driver Side Squib Circuit	1. Steering pad (Driver side squib) 2. Spiral cable 3. Center airbag sensor assembly 4. Instrument panel wire	*2	ON	<a href="#">RS-51</a>
B0102/11	Short to GND in Driver Side Squib Circuit	1. Steering pad (Driver side squib) 2. Spiral cable 3. Center airbag sensor assembly 4. Instrument panel wire	*2	ON	<a href="#">RS-56</a>
B0103/12	Short to B+ in Driver Side Squib Circuit	1. Steering pad (Driver side squib) 2. Spiral cable 3. Center airbag sensor assembly 4. Instrument panel wire	*2	ON	<a href="#">RS-61</a>
B0105/53	Short in Front Passenger Side Squib Circuit	1. Front passenger airbag assembly (Front passenger side squib) 2. Center airbag sensor assembly 3. Instrument panel wire	*2	ON	<a href="#">RS-66</a>
B0106/54	Open in Front Passenger Side Squib Circuit	1. Front passenger airbag assembly (Front passenger side squib) 2. Center airbag sensor assembly 3. Instrument panel wire	*2	ON	<a href="#">RS-69</a>
B0107/51	Short to GND in Front Passenger Side Squib Circuit	1. Front passenger airbag assembly (Front passenger side squib) 2. Center airbag sensor assembly 3. Instrument panel wire	*2	ON	<a href="#">RS-72</a>

DTC Code	Detection Item	Trouble Area	Check Mode	SRS Warning Light	See page
B0108/52	Short to B+ in Front Passenger Side Squib Circuit	1. Front passenger airbag assembly (Front passenger side squib) 2. Center airbag sensor assembly 3. Instrument panel wire	*2	ON	<a href="#">RS-75</a>
B0110/43	Short in Side Squib RH Circuit	1. Front seat side airbag assembly RH (Side squib RH) 2. Center airbag sensor assembly 3. Floor wire	*2	Blink	<a href="#">RS-79</a>
B0111/44	Open in Side Squib RH Circuit	1. Front seat side airbag assembly RH (Side squib RH) 2. Center airbag sensor assembly 3. Floor wire	*2	Blink	<a href="#">RS-82</a>
B0112/41	Short to GND in Side Squib RH Circuit	1. Front seat side airbag assembly RH (Side squib RH) 2. Center airbag sensor assembly 3. Floor wire	*2	Blink	<a href="#">RS-85</a>
B0113/42	Short to B+ in Side Squib RH Circuit	1. Front seat side airbag assembly RH (Side squib RH) 2. Center airbag sensor assembly 3. Floor wire	*2	Blink	<a href="#">RS-88</a>
B0115/47	Short in Side Squib LH Circuit	1. Front seat side airbag assembly LH (Side squib LH) 2. Center airbag sensor assembly 3. Floor wire No. 2	*2	Blink	<a href="#">RS-91</a>
B0116/48	Open in Side Squib LH Circuit	1. Front seat side airbag assembly LH (Side squib LH) 2. Center airbag sensor assembly 3. Floor wire No. 2	*2	Blink	<a href="#">RS-94</a>

DTC Code	Detection Item	Trouble Area	Check Mode	SRS Warning Light	See page
B0117/45	Short to GND in Side Squib LH Circuit	1. Front seat side airbag assembly LH (Side squib LH) 2. Center airbag sensor assembly 3. Floor wire No. 2	*2	Blink	<a href="#">RS-97</a>
B0118/46	Short to B+ in Side Squib LH Circuit	1. Front seat side airbag assembly LH (Side squib LH) 2. Center airbag sensor assembly 3. Floor wire No. 2	*2	Blink	<a href="#">RS-100</a>
B0126/27	Seat Belt Buckle Switch LH Circuit Malfunction	1. Front seat inner belt assembly LH (Seat belt buckle switch LH) 2. Center airbag sensor assembly 3. Floor wire No. 2	*2	ON	<a href="#">RS-103</a>
B0127/27	Seat Belt Buckle Switch LH Malfunction	1. Front seat inner belt assembly LH (Seat belt buckle switch LH) 2. Center airbag sensor assembly 3. Floor wire No. 2	*2	ON	<a href="#">RS-103</a>
B0130/63	Short in Front Pretensioner Squib RH Circuit	1. Front seat outer belt assembly RH (Front pretensioner squib RH) 2. Center airbag sensor assembly 3. Floor wire	*2	Blink	<a href="#">RS-109</a>
B0131/64	Open in Front Pretensioner Squib RH Circuit	1. Front seat outer belt assembly RH (Front pretensioner squib RH) 2. Center airbag sensor assembly 3. Floor wire	*2	Blink	<a href="#">RS-113</a>
B0132/61	Short to GND in Front Pretensioner Squib RH Circuit	1. Front seat outer belt assembly RH (Front pretensioner squib RH) 2. Center airbag sensor assembly 3. Floor wire	*2	Blink	<a href="#">RS-116</a>

DTC Code	Detection Item	Trouble Area	Check Mode	SRS Warning Light	See page
B0133/62	Short to B+ in Front Pretensioner Squib RH Circuit	1. Front seat outer belt assembly RH (Front pretensioner squib RH) 2. Center airbag sensor assembly 3. Floor wire	*2	Blink	<a href="#">RS-119</a>
B0135/73	Short in Front Pretensioner Squib LH Circuit	1. Front seat outer belt assembly LH (Front pretensioner squib LH) 2. Center airbag sensor assembly 3. Floor wire No. 2	*2	Blink	<a href="#">RS-123</a>
B0136/74	Open in Front Pretensioner Squib LH Circuit	1. Front seat outer belt assembly LH (Front pretensioner squib LH) 2. Center airbag sensor assembly 3. Floor wire No. 2	*2	Blink	<a href="#">RS-127</a>
B0137/71	Short to GND in Front Pretensioner Squib LH Circuit	1. Front seat outer belt assembly LH (Front pretensioner squib LH) 2. Center airbag sensor assembly 3. Floor wire No. 2	*2	Blink	<a href="#">RS-130</a>
B0138/72	Short to B+ in Front Pretensioner Squib LH Circuit	1. Front seat outer belt assembly LH (Front pretensioner squib LH) 2. Center airbag sensor assembly 3. Floor wire No. 2	*2	Blink	<a href="#">RS-133</a>
B1100/31	Center Airbag Sensor Assembly Malfunction	1. Center airbag sensor assembly 2. Engine room main wire 3. Instrument panel wire	*1	ON	<a href="#">RS-137</a>
B1135/24	Half Connection in Center Airbag Sensor Assembly Connectors	1. Electrical connection check mechanism 2. Center airbag sensor assembly	*1	ON	<a href="#">RS-147</a>
B1140/32	Side Airbag Sensor Assembly RH Circuit Malfunction	1. Side airbag sensor RH 2. Center airbag sensor assembly 3. Floor wire	*1	Blink	<a href="#">RS-149</a>

DTC Code	Detection Item	Trouble Area	Check Mode	SRS Warning Light	See page
B1141/33	Side Airbag Sensor Assembly LH Circuit Malfunction	1. Side airbag sensor LH 2. Center airbag sensor assembly 3. Floor wire No. 2	*1	Blink	<a href="#">RS-155</a>
B1148/36	Front Airbag Sensor RH Circuit Malfunction	1. Front airbag sensor RH 2. Center airbag sensor assembly 3. Engine room main wire 4. Instrument panel wire	*1	ON	<a href="#">RS-161</a>
B1149/37	Front Airbag Sensor LH Circuit Malfunction	1. Front airbag sensor LH 2. Center airbag sensor assembly 3. Engine room main wire 4. Instrument panel wire	*1	ON	<a href="#">RS-165</a>
B1150/23	Occupant Classification System Malfunction	1. Occupant classification ECU 2. Center airbag sensor 3. Floor wire 4. Front seat wire No. 1	*1	ON	<a href="#">RS-169</a>
B1152/28	Passenger Airbag ON/OFF Indicator Circuit Malfunction	1. Air conditioning control assembly 2. Center airbag sensor 3. Instrument panel wire	*1	ON	<a href="#">RS-178</a>
B1153/25	Seat Position Airbag Sensor Circuit Malfunction	1. Seat position airbag sensor 2. Center airbag sensor assembly 3. Front seat inner belt assembly LH 4. Floor wire No. 2	*1	ON	<a href="#">RS-189</a>
B1154/38	Rear Airbag Sensor RH Circuit Malfunction	1. Rear airbag sensor RH 2. Center airbag sensor assembly 3. Floor wire	*1	Blink	<a href="#">RS-199</a>
B1155/39	Rear Airbag Sensor LH Circuit Malfunction	1. Rear airbag sensor LH 2. Center airbag sensor assembly 3. Floor wire No. 2	*1	Blink	<a href="#">RS-205</a>
B1160/83	Short in Curtain Shield Squib RH Circuit	1. Curtain shield airbag assembly RH (Curtain shield squib RH) 2. Center airbag sensor assembly 3. Floor wire	*2	Blink	<a href="#">RS-211</a>

DTC Code	Detection Item	Trouble Area	Check Mode	SRS Warning Light	See page
B1161/84	Open in Curtain Shield Squib RH Circuit	1. Curtain shield airbag assembly RH (Curtain shield squib RH) 2. Center airbag sensor assembly 3. Floor wire	*2	Blink	<a href="#">RS-215</a>
B1162/81	Short to GND in Curtain Shield Squib RH Circuit	1. Curtain shield airbag assembly RH (Curtain shield squib RH) 2. Center airbag sensor assembly 3. Floor wire	*2	Blink	<a href="#">RS-218</a>
B1163/82	Short to B+ in Curtain Shield Squib RH Circuit	1. Curtain shield airbag assembly RH (Curtain shield squib RH) 2. Center airbag sensor assembly 3. Floor wire	*2	Blink	<a href="#">RS-221</a>
B1165/87	Short in Curtain Shield Squib LH Circuit	1. Curtain shield airbag assembly LH (Curtain shield squib LH) 2. Center airbag sensor assembly 3. Floor wire No. 2	*2	Blink	<a href="#">RS-224</a>
B1166/88	Open in Curtain Shield Squib LH Circuit	1. Curtain shield airbag assembly LH (Curtain shield squib LH) 2. Center airbag sensor assembly 3. Floor wire No. 2	*2	Blink	<a href="#">RS-228</a>
B1167/85	Short to GND in Curtain Shield Squib LH Circuit	1. Curtain shield airbag assembly LH (Curtain shield squib LH) 2. Center airbag sensor assembly 3. Floor wire No. 2	*2	Blink	<a href="#">RS-231</a>
B1168/86	Short to B+ in Curtain Shield Squib LH Circuit	1. Curtain shield airbag assembly LH (Curtain shield squib LH) 2. Center airbag sensor assembly 3. Floor wire No. 2	*2	Blink	<a href="#">RS-234</a>

DTC Code	Detection Item	Trouble Area	Check Mode	SRS Warning Light	See page
B1180/17	Short in Driver Side Squib 2nd Step Circuit	1. Steering pad (Driver side squib 2nd step) 2. Spiral cable 3. Center airbag sensor assembly 4. Instrument panel wire	*2	ON	<a href="#">RS-237</a>
B1181/18	Open in Driver Side Squib 2nd Step Circuit	1. Steering pad (Driver side squib 2nd step) 2. Spiral cable 3. Center airbag sensor assembly 4. Instrument panel wire	*2	ON	<a href="#">RS-242</a>
B1182/19	Short to GND in Driver Side Squib 2nd Step Circuit	1. Steering pad (Driver side squib 2nd step) 2. Spiral cable 3. Center airbag sensor assembly 4. Instrument panel wire	*2	ON	<a href="#">RS-247</a>
B1183/22	Short to B+ in Driver Side Squib 2nd Step Circuit	1. Steering pad (Driver side squib 2nd step) 2. Spiral cable 3. Center airbag sensor assembly 4. Instrument panel wire	*2	ON	<a href="#">RS-252</a>
B1185/57	Short in Front Passenger Side Squib 2nd Step Circuit	1. Front passenger airbag assembly (Front passenger side squib 2nd step) 2. Center airbag sensor assembly 3. Instrument panel wire	*2	ON	<a href="#">RS-257</a>
B1186/58	Open in Front Passenger Side Squib 2nd Step Circuit	1. Front passenger airbag assembly (Front passenger side squib 2nd step) 2. Center airbag sensor assembly 3. Instrument panel wire	*2	ON	<a href="#">RS-260</a>

DTC Code	Detection Item	Trouble Area	Check Mode	SRS Warning Light	See page
B1187/55	Short to GND in Front Passenger Side Squib 2nd Step Circuit	1. Front passenger airbag assembly (Front passenger side squib 2nd step) 2. Center airbag sensor assembly 3. Instrument panel wire	*2	ON	<a href="#">RS-263</a>
B1188/56	Short to B+ in Front Passenger Side Squib 2nd Step Circuit	1. Front passenger airbag assembly (Front passenger side squib 2nd step) 2. Center airbag sensor assembly 3. Instrument panel wire	*2	ON	<a href="#">RS-266</a>
B1628/29	Roll Over Cut Off Indicator Malfunction	1. Combination meter assembly 2. Center airbag sensor assembly 3. Instrument panel wire	*1	Blink	<a href="#">RS-270</a>