


FRONT SEAT OUTER BELT ASSEMBLY

COMPONENTS

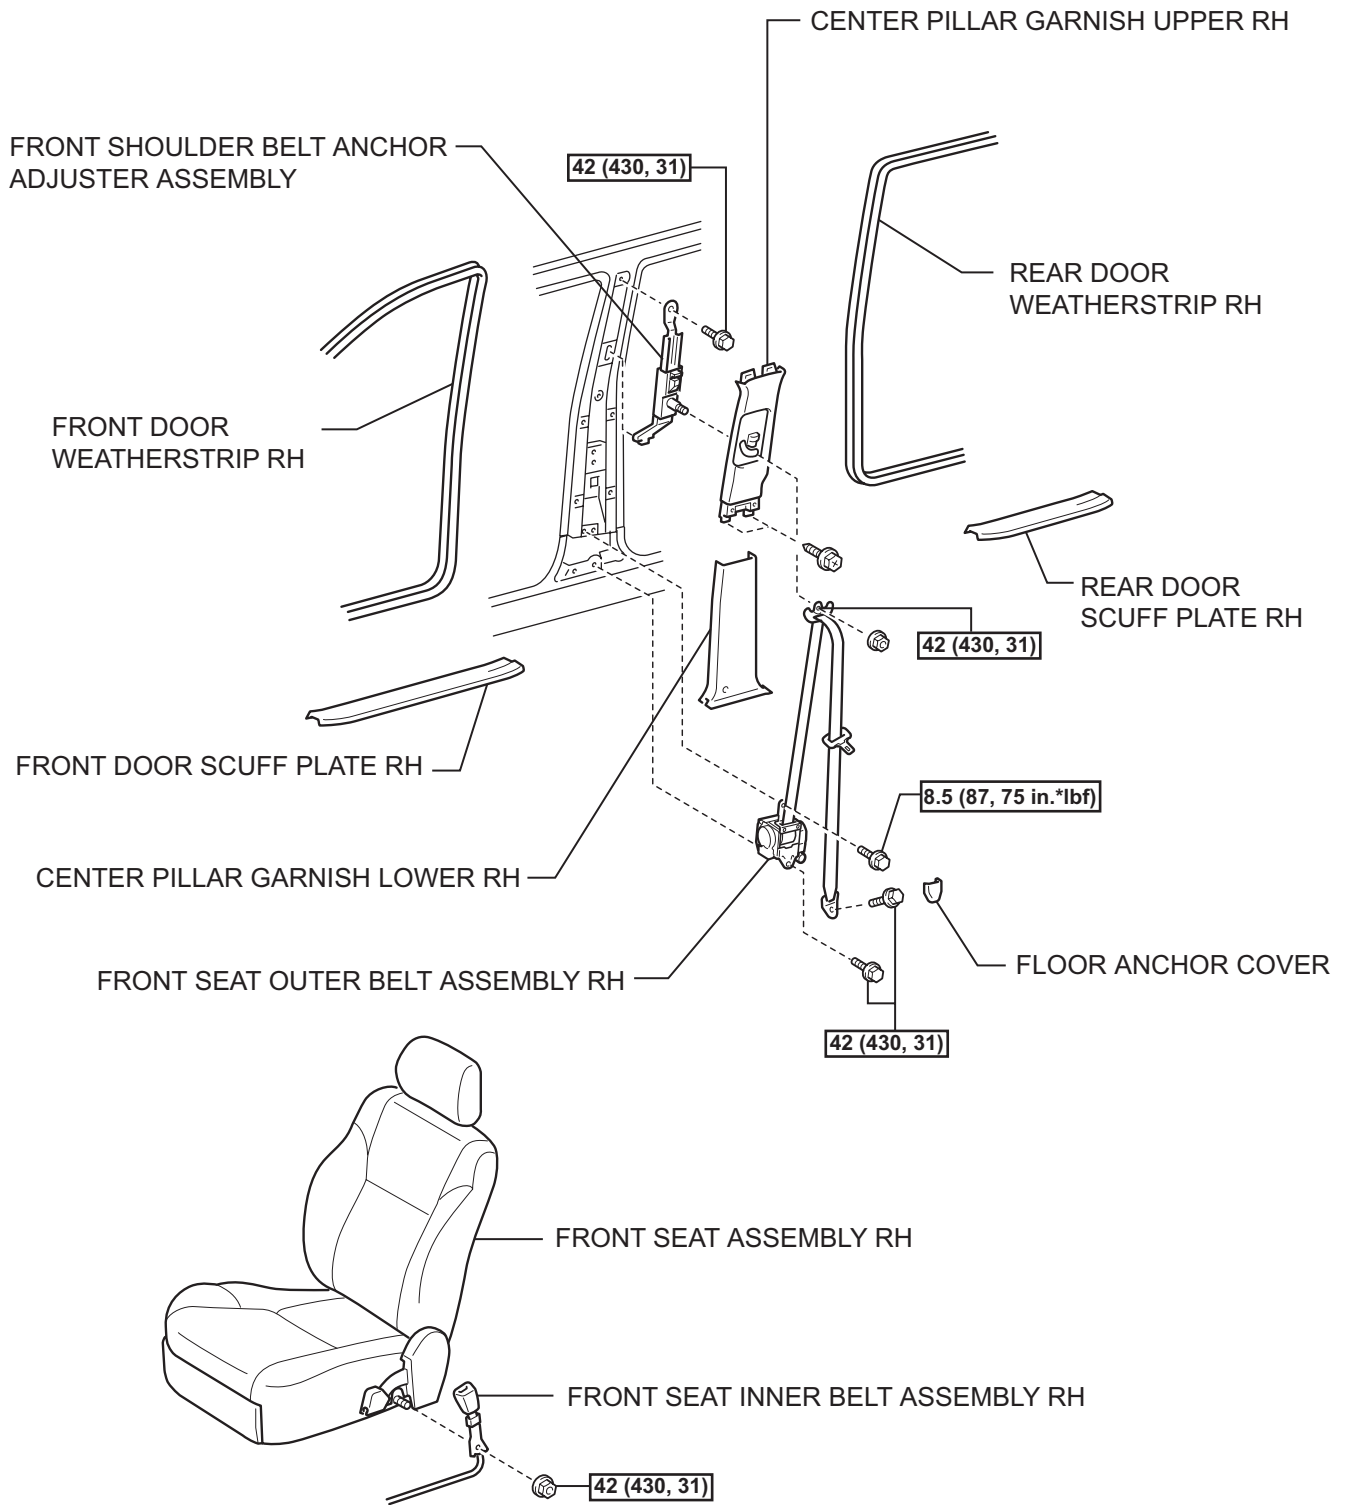

[N*m (kgf*cm, ft.*lbf)]: Specified torque

SB

REMOVAL


HINT:

Use the same procedures for the LH and RH.

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
2. **REMOVE FRONT DOOR SCUFF PLATE RH**
3. **REMOVE REAR DOOR SCUFF PLATE RH**
4. **REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH**
5. **REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH**
6. **REMOVE CENTER PILLAR GARNISH LOWER RH**
 - (a) Using a screwdriver, disengage the 6 claws labeled A and 2 claws labeled B. Remove the 2 clips and pillar garnish.

HINT:


Tape the screwdriver tip before use.

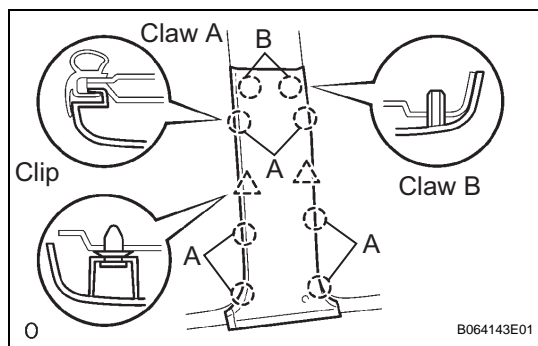

7. **REMOVE CENTER PILLAR GARNISH UPPER RH**
 - (a) Remove the bolt and disconnect the front seat outer belt (floor anchor side).
 - (b) Remove the 2 bolts.
 - (c) Using a screwdriver, disengage the 6 claws and clip, and remove the pillar garnish.

HINT:


Tape the screwdriver tip before use.

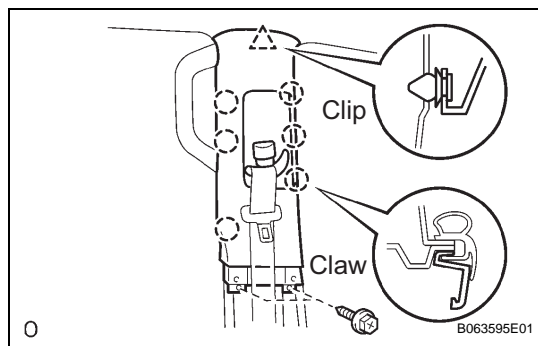

8. **REMOVE FRONT SEAT OUTER BELT ASSEMBLY RH**

NOTICE:

- Removal operation concerning the seat belt with the pretensioner must be started in 90 seconds or more after the ignition switch is turned OFF and the battery negative terminal is disconnected.
 - Carefully read the notices for the "pretensioner" in the SRS airbag system and the outer belt assembly.
- (a) Remove the bolt and disconnect the front seat outer belt on the shoulder anchor side.

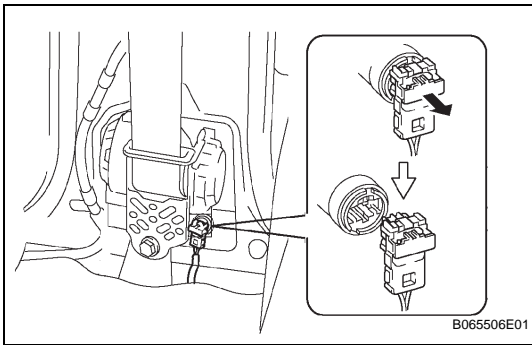

- (b) Disconnect the pretensioner connector as shown in the illustration.
- (c) Remove the 2 bolts and the outer belt assembly.