

## DISASSEMBLY

### HINT:


- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- A bolt without a torque specification is shown in the standard bolt chart (See page IP-6).

### 1. REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH

- (a) Using a screwdriver, remove the lower frame bracket garnish.

#### HINT:

Tape the screwdriver tip before use.

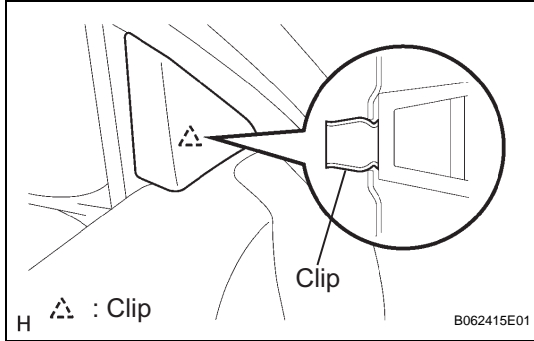


### 2. REMOVE FRONT DOOR INSIDE HANDLE BEZEL LH

- (a) Using a screwdriver, disengage the 3 claws, and remove the inside handle bezel.

#### HINT:

Tape the screwdriver tip before use.

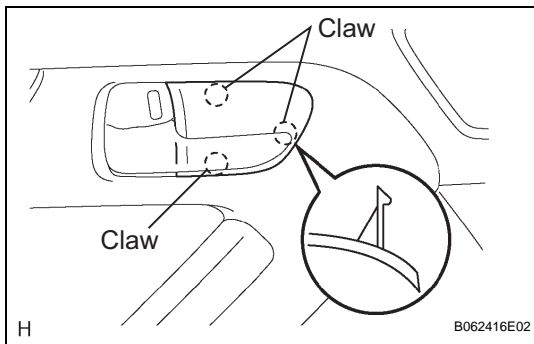


### 3. REMOVE FRONT ARMREST ASSEMBLY LH

- (a) Disengage the claws, and remove the armrest from the trim board.

#### HINT:

Tape the screwdriver tip before use.

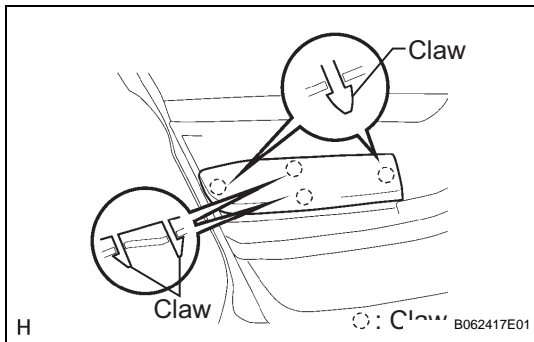



### 4. REMOVE FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH

- (a) Remove the 2 cushion rubbers.  
 (b) Remove the 2 screws and clips.  
 (c) Using a clip remover, remove the 11 clips.  
 (d) Remove the trim board upward.


#### HINT:

In order to prevent the door from being damaged, cover the parts indicated by arrow marks in the illustration with tape.

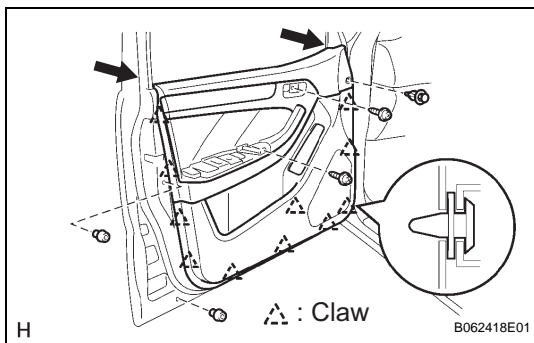


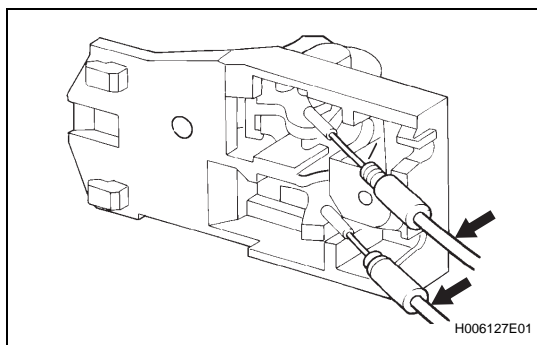

- (e) Disconnect the 2 cables from the inside handle as shown in the illustration.
- (f) Remove the inner weatherstrip.
- (g) Remove the 3 screws and power window master switch.

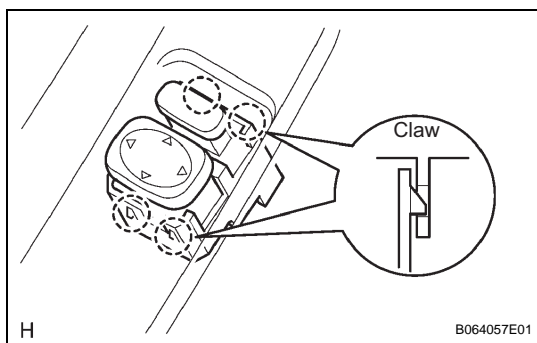


- (h) Using a screwdriver, disengage the 4 claws.  
HINT:  
Tape the screwdriver tip before use.
- (i) Remove the power mirror switch, as shown in the illustration.

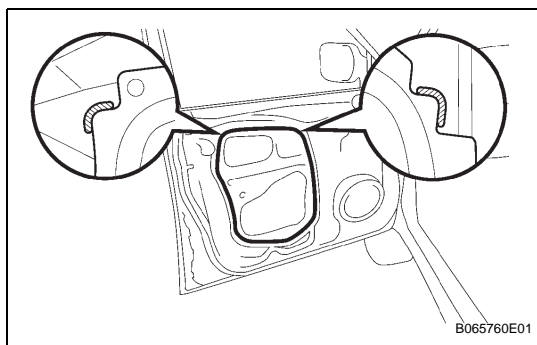

## 5. REMOVE FRONT DOOR SERVICE HOLE COVER LH


- (a) Remove the front door service hole cover LH.  
**NOTICE:**  
Remove the remaining tape on the door side.

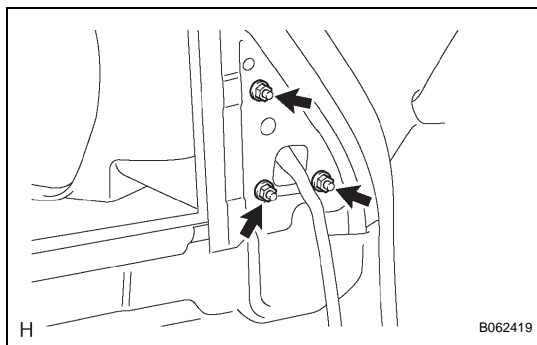

## 6. REMOVE OUTER REAR VIEW MIRROR ASSEMBLY LH

- (a) Disconnect the outer rear view mirror connector.
- (b) Remove the 3 nuts and outer rear view mirror.  
**NOTICE:**  
When the nuts are removed, the outer rear view mirror might drop and be deformed.

## 7. REMOVE FRONT NO. 1 SPEAKER ASSEMBLY (See page [AV-172](#))

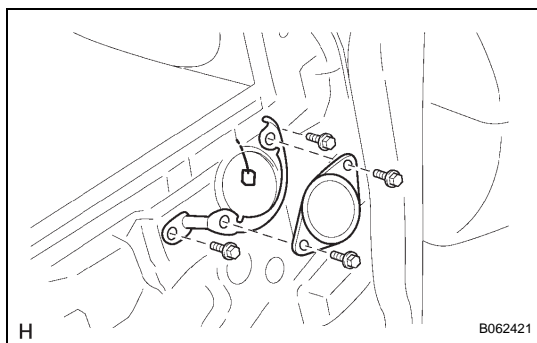

## 8. REMOVE FRONT NO. 2 SPEAKER ASSEMBLY

- (a) Disconnect the speaker connector.
- (b) Remove the 2 bolts and No. 2 speaker.
- (c) Remove the 2 bolts and speaker mounting No. 1 bracket.


## 9. REMOVE FRONT DOOR WINDOW FRAME MOULDING REAR LH (See page [ET-63](#))

## 10. REMOVE FRONT DOOR GLASS WEATHERSTRIP ASSEMBLY OUTER LH (See page [ET-27](#))

**11. REMOVE FRONT DOOR GLASS SUB-ASSEMBLY LH****HINT:**

Insert a shop rag inside the door panel to prevent the glass from being scratched.

- (a) Open the door glass until the bolts appear in the service holes.
- (b) Remove the 2 bolts and holding the door glass.

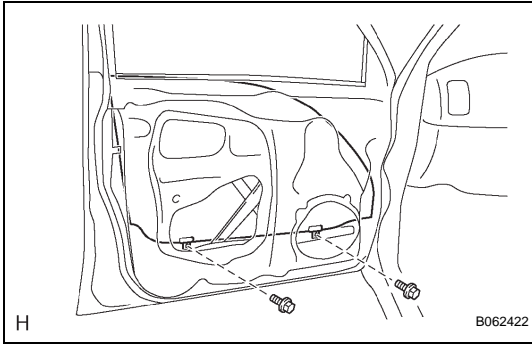


- (c) Remove the door glass, as shown in the illustration.

**NOTICE:**

- Do not damage the door glass.
- When the bolts are removed, the door glass might drop and be deformed.

- (d) Remove the door glass run.

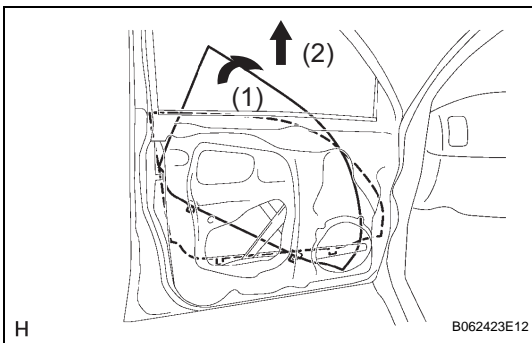**12. REMOVE FRONT DOOR WINDOW REGULATOR SUB-ASSEMBLY LH**


- (a) Disconnect the window regulator connector.
- (b) Remove the 6 bolts and window regulator.

**NOTICE:**

When the bolts are removed, the window regulator might drop and be deformed.

**HINT:**


Remove the window regulator through the service hole.

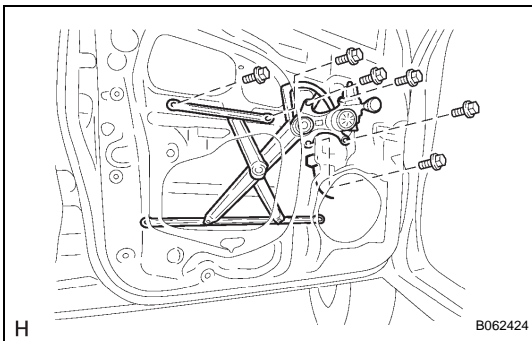
**13. REMOVE POWER WINDOW REGULATOR MOTOR ASSEMBLY LH**

- (a) Place matchmarks on the window regulator motor gear and regulator gear.
- (b) Using a "torx" driver (T25), remove the 3 screws and window regulator motor.


**14. REMOVE FRONT DOOR FRAME SUB-ASSEMBLY REAR LOWER LH**

- (a) Remove the bolt and frame rear lower.

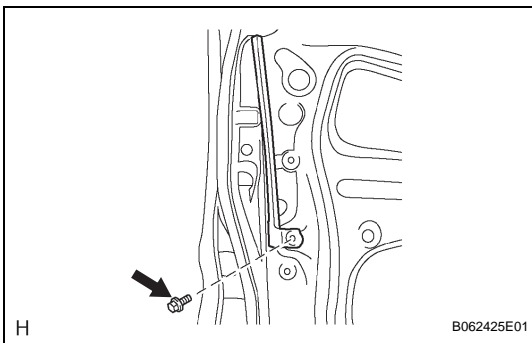


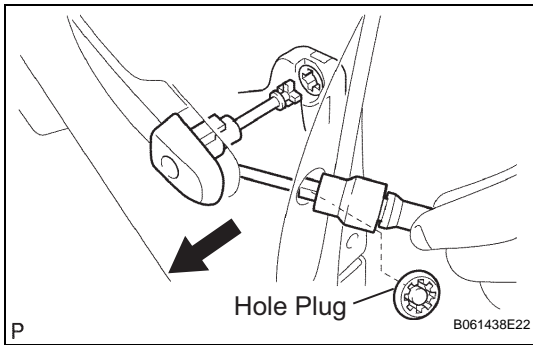


- 15. REMOVE FRONT DOOR OUTSIDE HANDLE COVER LH**
- Remove the hole plug.
  - Using a "torx" socket wrench (T30), loosen the screw and remove the outside handle cover with the door lock key cylinder installed.

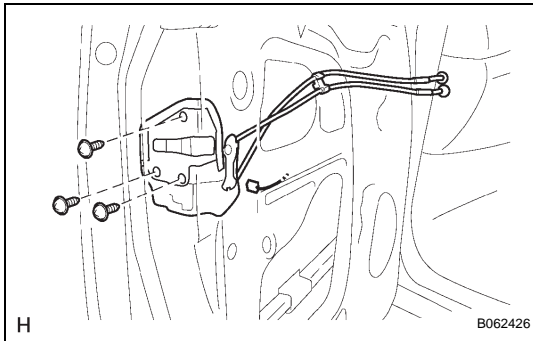


- 16. REMOVE FRONT DOOR W/MOTOR LOCK ASSEMBLY LH**
- Disconnect the door lock connector.
  - Using a "torx" socket wrench (T30), remove the 3 screws and door lock.
- HINT:**  
Remove the door lock through the service hole.
- Remove the door lock wire harness packing.

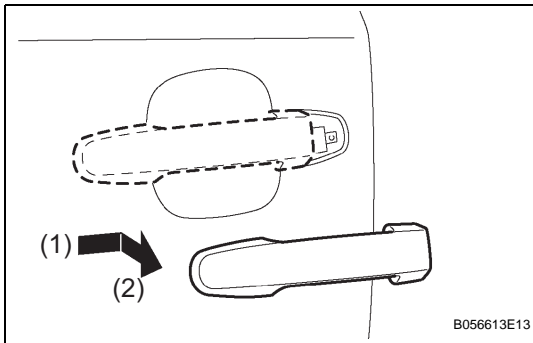


- 17. REMOVE FRONT DOOR HANDLE ASSEMBLY OUTSIDE LH**
- Pushing and pulling the outside handle in the arrow mark direction in the illustration, remove the outside handle.
  - Remove the outside handle pad front and rear.

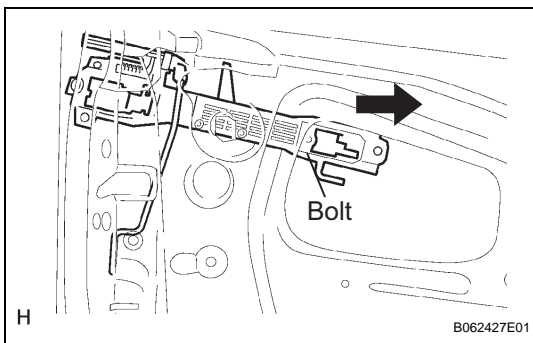

- 18. REMOVE FRONT DOOR OUTSIDE HANDLE FRAME SUB-ASSEMBLY LH**
- Using a "torx" socket wrench (T30), loosen the screw.
  - Slide the outside handle frame from to remove it.
- HINT:**  
Remove the outside handle frame through the service hole.

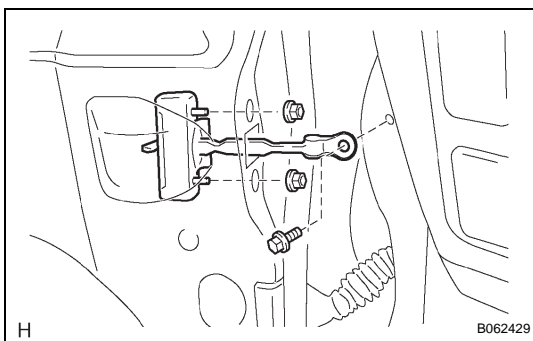

- 19. REMOVE FRONT DOOR LOCK CHECK ASSEMBLY LH**
- Remove the 2 nuts, bolt and the door check.
- 20. REMOVE FRONT DOOR WEATHERSTRIP LH**
- Using a clip remover, disengage the clips and remove the weatherstrip.
- HINT:**  
If the clips are damaged, exchange them for new clips.

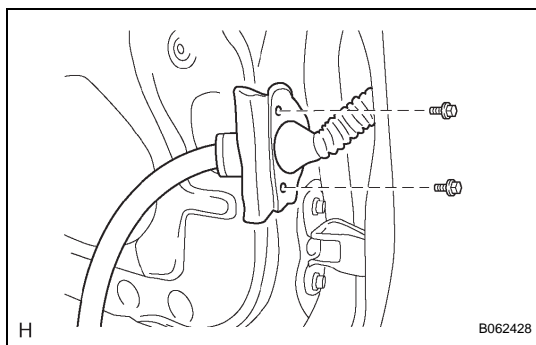**21. REMOVE FRONT DOOR WIRE LH**

- (a) Disconnect the door wire clips.
- (b) Remove the 2 bolts and door wire.